INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
SIDE SILL TRIM P/N 08F05-SV2-100	1999 ACCORD 2-DOOR WITH OPTIONAL SIDE UNDER SPOILERS	AII 20044
		Issue Date NOV 1998

PARTS LIST

2 Sill trims



4 Plastic end caps



4 Small spacer washers

8 Washers

8 Nuts

1994-95 Accord 2-door instructions (Discard.)

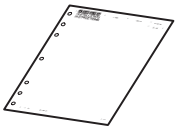

ADDITIONAL PARTS REQUIRED

16 Washers:
P/N 94103-04800
H/C 0638247

TOOLS AND MATERIALS REQUIRED

Felt-tip pen

Metric tape measure

7 mm Combination wrench

Eye protection (face shield, safety goggles, etc.)

6 mm Drill bit

Drill

Hondalock 2: P/N 08713-0002, H/C 2963833

INSTALLATION

Customer Information: The information in this Accessory Installation Instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your car. These procedures should not be attempted by "do-it-yourselfers."

NOTE:

- The optional side under spoilers are required to install the side sill trim.
- The illustrations in these instructions show the left side sill trim being installed. The same procedure applies to installing the right side sill trim.

1. Remove the two optional side under spoilers.

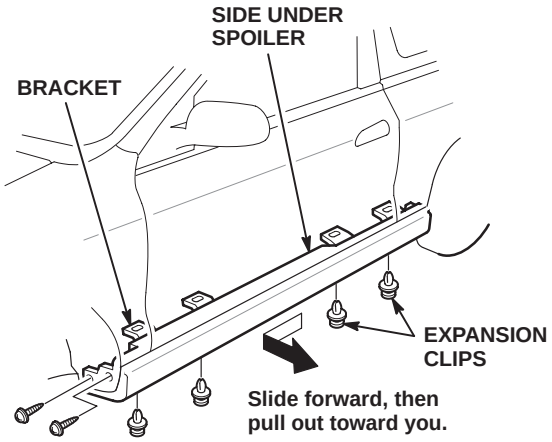

How to remove the clip.

2. Measure and mark each of the two side under spoilers in the areas shown.

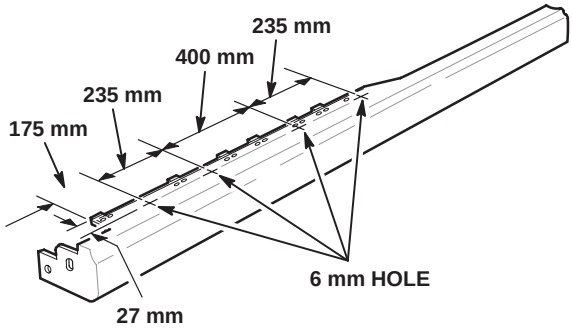

3. While wearing eye protection, drill a 6 mm hole at each of the four marks you made on both side under spoilers.

© 1998 American Honda Motor Co., Inc. – All Rights Reserved

4. Remove and discard the protective caps from each of the four studs on one side sill trim. Do not remove the washers from the two center studs.

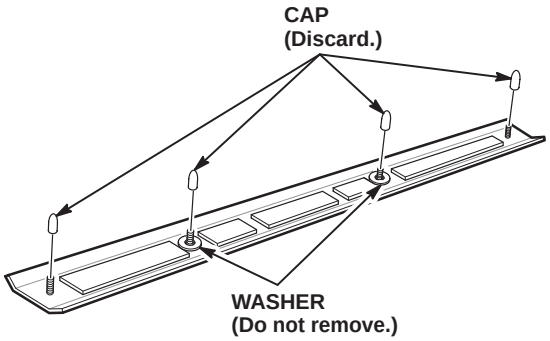

5. At the two end studs, install the plastic end caps with one small spacer washer under each end cap, and install two washers on top of each end cap.

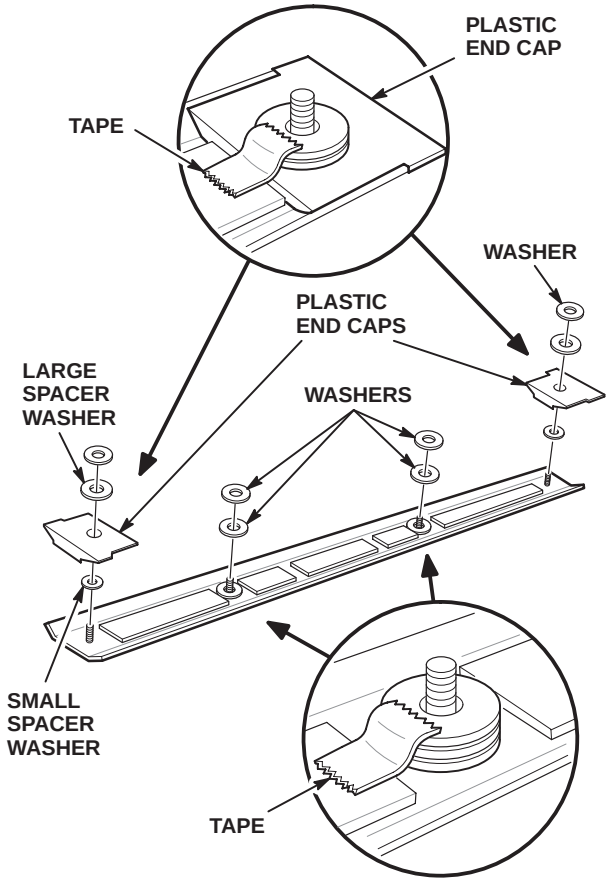

6. Install two washers over each of the two center studs.
7. Use a small piece of masking tape on each stud to hold the washers and the end caps in position.
8. Carefully fit the side sill trim into place on the left side under spoiler with the word “COUPE” facing outward. Apply two drops of Hondalock 2 to each stud, then install a washer and a nut on each stud, and tighten securely. To prevent damage to the face of the side sill trim, do not overtighten the nuts.

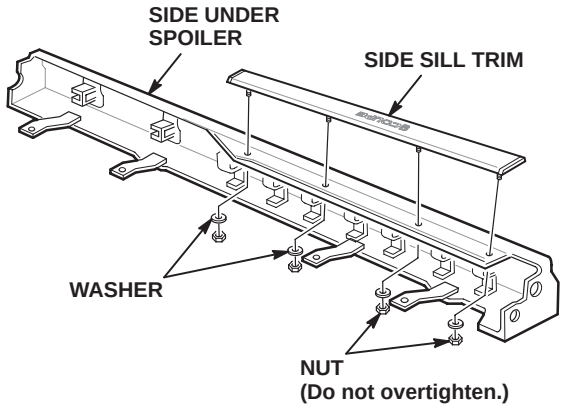

9. Reinstall the side under spoiler onto the front side trim.
10. Repeat steps 4 through 9 to install the right side sill trim onto the right side under spoiler.

AII 20044 (9811)
© 1998 American Honda Motor Co., Inc. – All Rights Reserved